

# This operation guide describes the basic functions of your GT Series Tenant Station

For a complete operation manual (3.7 MB), scan QR code or use link to download it from the manufacturer's website: [www.aiphone.com/gt-2h\\_op-man](http://www.aiphone.com/gt-2h_op-man)



## Power Source

This tenant sub station is powered by the main tenant station (GT-2C) and will always remain on, even when the screen is off. Contact the building manager if the tenant sub station in this residence is not working.

## LCD Screen

## Speaker

## LCD Screen Brightness Control

Use the dial to adjust the LCD screen brightness levels (0~10).

## Microphone

## Volume Control

Use the dial to adjust the communication volume (0~10).

## Chime Volume Control

Use the dial to adjust the chime volume (0~10). The TONE OFF light blinks slowly when the chime is muted.

## Operation Buttons

**MONITOR** Push the MONITOR button to see and hear activity in the hallway (personal tenant door station required) or at the main entrance (if enabled).

**CALL** Push the CALL button to talk between rooms or to call all stations within the apartment (two or more tenant stations required).

## GUARD Button

**GUARD** Push the GUARD button to call all guard and concierge stations connected to the system (if included). To view a visitor on a CCTV camera (if enabled), push the GUARD button while in communication with the entrance station.

## Door Release Button

**Key** Push the door release button to unlock the entrance during a call.

## OPTION Button

**OPTION** Push the OPTION button to activate an external device (if included).

## OFF Button

**OFF** Push the OFF button to end a call (this does not turn off the station).

## TALK Button

**TALK** Push the TALK button to answer an incoming call. Once answered, conversation becomes hands-free. For push-to-talk (PTT) mode, push the TALK button until a beep is heard. The conversation then requires the TALK button to be pushed and held while talking and released while listening. Whether the conversation is hands-free or PTT, the talk indicator light turns on while you speak and will turn off while your visitor speaks.

## ADJUST Button

**ADJUST** Push the ADJUST button to compensate for low or bright backlight conditions when viewing video from a door station.

## ZOOM/WIDE Button

**ZOOM/WIDE** Push the ZOOM/WIDE button to change the screen view or to make a menu selection.

## Camera/Cursor Control Button

**Camera/Cursor** Push  $\Delta$ ,  $\nabla$ ,  $\triangleleft$ , or  $\triangleright$  to change the camera view (zoom-view only). When making menu selections, push  $\Delta$  or  $\nabla$  to change the cursor position.

